#### **WARRANTY CARD**

- KH Trading machines and tools are covered by 6/24 months warranty, starting on the date of purchase, as described in the Civil Code (proof of purchase or invoice receipt must be enclosed with the warranty card when making a claim).
- 2. This warranty does not cover defects caused by unprofessional handling, machine overloads, not complying with instructions contained in this manual, using accessories that are not approved, unauthorized repair, regular wear and tear and damages occurred during transport. Further, this warranty does not cover parts and accessories such as the motor, carbon brushes, seals and hot-air operated parts and parts that need to be changed regularly.
- 3. If the repair is to be found as not covered by the warranty policy, all costs including the repair and shipping to and from the repair centre will be paid by the customer, according to valid price list. See www.
- 4. When making a claim, you must present the warranty card, showing the date of the purchase, the serial number of the machine, vendor stamp and signature of sales clerk, as well as the proof of purchase receipt.
- 5. Warranty claim shall be made at the vendor shop where you bought your machine or you may mail it to a service centre. The vendor is obligated to fill out the warranty card (date of sale, serial number, vendor stamp and signature). All these information must be filled in at the time of sale.
- 6. The warranty period will be extended for the period of time for which the machine has been in the service centre possession. If the repair or defect is not covered by the warranty policy, all costs including the repair and shipping will be paid by the owner of the machine / tool. We recommend sending the machine in its original packaging. Please, also enclose brief description of the defect with the packaging.
- 7. Before sending the machine for repair, clean it thoroughly. If the received machine is dirty, it may be rejected by the service shop or you may be charged a cleaning fee.

#### SERVICE

Logistic centre Klecany Topolová 483 250 67 Klecany Czech Republic

http://www.KHnet.cz Email: servis@KHnet.cz

Product: SET OF UNIVERSAL PULLERS XXL		
Type: <b>HS1244</b>	Serial number (product series):	
Date of manufacture:	Repair centre notes:	
Date of sale, stamp, signature:		

Without the correctly filled warranty card or without proof of purchase receipt, including the product type (invoice, purchase receipt) no warranty claim will be processed.



## **USER'S MANUAL**

# SET OF UNIVERSAL U-PULLERS XXL



**HS1244** 

Dear customer. Thank you for purchasing set of universal U-pullers from KH Trading, s.r.o.

Our company is ready to offer you our services - before, during and after you buy our product.

If you have any question, comment or idea, please contact our business centre. We will do our best to address your comment or question in timely matter.

Before first use, please read this manual carefully. It is your responsibility to study all instructions, necessary for safe use and operation and to understand all risks that may be involved during the use of power machines.

WARNING! Do not try to use this machine before reading this entire manual and before you know how to handle it. Keep this manual for future reference.

Pay special attention to safety instructions. Not complying with safety rules may cause injury to the operating person or to people standing by or it may cause damage to the machine or to the work piece.

Pay special attention to safety notes and safety labels on the machine.

Never remove or damage them.

Please, write information such as the invoice numbe	r
and the number of the sale receipt here in this box.	

### **DESCRIPTION**

This set contains a set of U-pullers including 3 sets of gripping arms of different sizes and span width. Two heads enables you to select between two gripping arms or three gripping arms. Hydraulic screw enables you to operate this device safely and quickly. To speed up you work, you may use two or three point grip without needing to turn the spindle with the nut. The pulling force is transferred via the jaw toothed gear over to the centre nut with a pinpoint. The screws serve as a auxiliary aid and are not subject to shear stress forces.

## **TECHNICAL SPECIFICATION**

Spindle
Thread diameter
Thread length
Usable thread length
Hydraulically extracted stud
Diameter
Lift
Stud extensions
Diameter
Length
Length
Jaw length
Jaw 1
Jaw 2
Jaw 3
Distance/diameter Distance/diameter
Jaw 1
Jaw 2
Jaw 3
Column length
Column 1
Column 2
Distance between columns
Diameter range

The accuracy of instructions, graphs and information contained herein, depends on the printing date. Due to continuous product improvement, the manufacturer reserves the right to change technical parameters of the product, without prior customer notification.

## **REPAIR AND MAINTENANCE REPORT**

Report and maintenance report:

DATE	REPAIR AND MAINTENANCE REPORT	SERVICE SHOP

#### **MAINTENANCE**

- Keep your tools clean. Dirt from tools may enter the inner machine mechanism and cause damages to the tools or machine.
- Do not use aggressive cleaning solution or paint thinners to clean the machine.
- Clean plastic parts with soft cloth dipped in soapy water.
- Clean and lubricate metal surfaces with a cloth dipped in paraffin oil.
- Store the machine well lubricated in a dry place to protect it from corrosion and rust.

#### Lubrication

- Keep the spindle threading clean and lubricate it with an appropriate type of grease.
- During work, make sure the spindle threading and the nut are well lubricated to increase the threading lifespan. Lubrication also enables you to use less force during work.

#### **DISPOSAL**

When the operational life of your device is over, dispose off it in accordance with valid rules and regulations. Your product is made of metal and plastic parts that may be recycled when separated.

- 1. Disassemble all parts.
- 2. Separate all parts according to the material they are made of (e.g. metals, rubber, plastics, etc.).

Take the separated parts to the recycling facility near you.

Information about the locations of recycling centres may be found at your local City office or throughout an Internet search.

#### **CAUTION**

If the machine breaks down, send it back to the vendor for quick repair.

Please, enclose brief description of the defect. That makes repair easier. If the machine is still covered by warranty, enclose the warranty card and proof of purchase receipt. After the warranty period expires, we repair your machine for a special price.

To prevent possible damages during shipping, packed the machine carefully or use the original packaging material.

We are not liable for damages occurred during shipping due to improper packaging.

**Note:** Pictures and contents in this manual may slightly differ from the actual product or accessories. It is due to continuous improvement of our products. Such small differences have no effect on the product functionality.

## **SAFETY PRECAUTIONS**

- This device may be used by a qualified person, 18 years or older who has been trained in work and environmental safety procedures.
- Any person using this equipment must possess a medical certificate demonstrating his eligibility to operate this equipment.

#### Symbols used in this manual



/ Warning!

This symbol informs you about the risk of personal injury or damage to the machine or materials.



Warning!



Note:

Additional information.



Use personal safety gear.



#### **General instructions**

- Plastic packaging materials pose danger to children and animals.
- Make sure you know how to control your tool or machine and that you are familiar with its operating procedure. Know the hazards that may occur, if not used correctly.
- If other person is using this machine make sure that he knows how to safely operate this equipment and that he is familiar with hazards and risk that may occur, if not used correctly.
- Pay special attention to safety notes and safety labels on the machine. Never remove or damage them.
   If the warning label becomes unreadable, please contact your vendor.
- Keep your working place clean. Dirty and disorganized workplace may cause accidents.
- Never work in tight spaces or in purely lit rooms. Make sure the floor is solid and stable and that you can
  move around easily. Always keep stable posture.
- Keep focusing and use common sense. Do not continue working if you cannot pay attention.
- Maintain your tools clean and in safe working conditions.
- · Handles must be kept free of grease and dirt.
- Make sure no children, unauthorized persons or animals have access to your workshop.
- Never put your hands or legs inside the working area.
- Never leave your machine unattended during operation.
- Use only for purposes for which it has been designed.
- Use personal protective gear such as safety goggles, ear protection, respirator, safe working shoes etc.
- Do not overreach, use both hands.
- Never work under the influence of alcohol or other drugs.

- Do not use the machine if you feel dizzy or week.
- Any modifications or improvements to the machine are strictly prohibited. If you discover any cracks or damages to the machine, do not use.
- Never perform any maintenance during operation.
- If you see any unusual sign or hear any strange sound, switch of machine immediately.
- Do not forget to remove all wrenches and screwdrivers from the machine after use.
- Before use, make sure all screws are tightened securely.
- Perform maintenance regularly. Before use make sure the machine is in good working conditions and without any damage.
- · Use only original spare parts during repairs.
- Using accessories of extension pieces not approved by the manufacturer may cause personal injuries.
- Use this machine only for work that could be handled by it. Do not overload tools, accessories or the machine. For large work volume use more powerful machine.
- Do not overload the machine. Measure the work load in such way, so it could be done with comfortable speed. Damages due to machine overload are not covered by the warranty policy.
- Do not expose to extremely high temperature or direct sunlight.
- This machine is not designed for use in humid environments or under water.
- If you are not using your equipment, store it in a dry and locked place, out of reach of children.
- Before use, inspect all safety elements and make sure they work as designed. Make sure all moving parts
  are in good working conditions.
- Inspect all parts for cracks and damages. Make sure movable parts are not stuck and set properly. Also
  take into consideration other conditions that may have a negative effect on the proper function of your
  machine.
- If not stated otherwise in this manual, all damaged parts and safety elements must be repaired or changed.

#### ₩ Fine mechanics

- Never use a vise to hold your machine.
- Protect your machine from fall and impact. After work store all tools and equipment back to the briefcase.

## Assembly

· Do not use the machine unless completely assembled.

## Automotive repair shop equipment

 Before performing any maintenance, shift the gear into neutral, apply the vehicle hand break, or use other means to prevent the vehicle form accidental move.

## **ASSEMBLY**

Before throwing the packaging material out, make sure no part is left inside. If so, take it out and install it.
 Use the part listing for check-up and the installation drawing for guidance.

#### **OPERATION**

- The spindle must be screwed inside the nut all the way.
- For pressing operations use spindle extension pieces and not only the surface of the spindle.
- Jaw teeth must fit inside the nut groove (for two and three arm heads).

The pulling force is transferred via the jaw toothed gear and not buy the screws. These serve as a auxiliary aid and make the use of the puller easier.

- Nuts that hold the jaws inside the head may be tighten by hand only, so they are securely attached and you will not lose them.
- Columns or their extension pieces must be tighten inside the lower jaws and also the pulling screws of the jaws must be securely fastened to prevent damage to the column threading.
- To fasten the columns in the upper cross arm use nut and washer assembly.
- Steel jaws may be used in both positions they are equipped with continuous go-through-threading.

Detailed description of the use of this device is not included in this manual, because the manufacturer / distributor assumes that the user is experienced in similar type of work. Also according to the applicable law, this device is considered as a commonly sold and used tool. If the user is unfamiliar with the use of this device, we recommend finding out more information about using this device at the Department of work safety.











4