

CONTACTS

unitechnic.cz s.r.o.

Customer Service Department
Former sugar refinery facility
Hlavní 29 (Hall No. 3 uni-max)
277 45 Úžice

Tel. of Customer Service Dept. **266 190 156** T-Mobile **603 414 975**

266 190 111 O2 **601 218 255**

Fax **66 190 100** Vodafone 6 **08 227 255**

E-Mail: <http://www.uni-max.cz>
 reklamace1@khnet.cz
 obchod@khnet.cz

uni-max

TRANSLATION OF THE ORIGINAL MANUAL MANUAL LUBRICATION PRESS TRG 96



TRG2096

Dear Customer, thank you for purchasing a product from UNI-MAX.
Our company is ready to provide you with its services - before, during and after you purchase a product.
Should you have any questions, suggestions or recommendations, please contact our place of business.
We will endeavour to consider and respond to your suggestion to the highest extent possible.

It is a legal requirement, within the sense of this user's manual, that the user confirms of their own free will that they have thoroughly studied the operating instructions, fully understand their meaning and are familiar with all the risks before the first use of the equipment.

ATTENTION! Do not attempt to put into operation (or use) the equipment before you are completely familiarised with the entire user's manual. Keep this user's manual for future reference.
Attention should be especially paid to occupational safety guidelines. Non-compliance or inaccurate implementation of these instructions may lead to injuries to the operator or other persons, or it may cause damage to equipment or the processed material.
Pay special attention to the safety instructions provided on the equipment's labels. Do not remove or damage these labels.

In order to facilitate possible communication, transcribe the number from the invoice or proof of purchase here.

DESCRIPTION

High-pressure lubrication press with a manual pump force of 15 – 20 kg, output pressure of 130 – 140 bar and a tank capacity of 13 kg, is portable and does not require connection to a power source. The press is equipped with 2 travel wheels, a rest and a 2.5-metre hose, supplied empty.

TECHNICAL DATA

Max. output pressure	130 – 140 bar
Tank capacity	13 kg
Dimensions	350 × 310 × 610 mm
Weight (empty)	12 kg

The accuracy of the text, graphs and data depends on the date of printing. In the interest of continuous improvement of our products, we reserve the right to make changes to our technical data without prior notice.

SAFETY PRECAUTIONS

! General information

- Using plastic bags for packaging can be hazardous to children and animals.
- Familiarize yourself with the equipment, its controls, operation, elements of this equipment and possible risks associated with its incorrect use.
- Ensure that the user of the equipment has been thoroughly familiarised with the controls, operation, elements of this equipment and possible hazards resulting from its use.
- Keep the workplace clean and in order. Untidiness in the workplace may lead to an accident.
- Never work in cramped or poorly lit areas. Always make sure that the floor is stable and there is good access for performing work tasks. Always maintain a stable posture.
- Take care of your tools and keep them clean.
- Handles and switches must be kept dry and free from oil and grease.
- Do not use the equipment for any purpose other than for which it is intended.
- Do not overexert yourself, always use both hands.
- No modifications to the equipment are permitted. DO NOT USE it if you discover bent parts, cracks or other damage.
- Make sure that all bolts are tightened before use.
- Ensure proper maintenance of the equipment. Check the equipment for damage before using it.

- Only use original spare parts for maintenance and repair.
- Do not overload the equipment. Organise workflow to enable effortless work at optimal speed. Any damage caused by overloading the equipment is not covered by the warranty.
- When not using the equipment, store it in a dry, safe place away from children.
- Before starting the equipment, check that all safety elements are working smoothly and efficiently. Make sure that all moving parts are in good condition.
- Check whether any parts are broken or stuck, make sure that all components are properly mounted. Also check all other conditions, which may affect the operation of the equipment.
- Unless otherwise stated in this manual, any damaged parts or safety elements must be repaired or replaced.


! Fine mechanics

- Never clamp the equipment into a vice.
- Protect it against impacts and falls.

! Mechanical equipment

- Make sure that all connections are tightened before use.
- Make sure that all moving parts are in good condition.

OPERATION

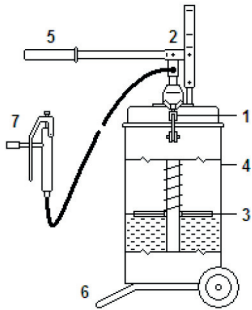

Filling:

- Loosen the straps 1, take out the press assembly 2 and the wiping disc 3.
- Fill the tank 4 with a plastic lubricant so that no air remains trapped inside.
- Insert the wiping disc 3 and the press 2 with the lever 5 pointing towards the support foot 6. Tighten the straps 1.
- Press the lever of the output valve 7 and using the lever 5 pump until lubricant appears at the outlet of the valve.

Lubrication:

- Place valve 7 against the lubrication point, step down on the support foot 6 and use the lever 5 to pump out the required amount.

ATTENTION

In the event of a malfunction, send the equipment to the vendor's address so that the repair can be carried out as soon as possible. A brief description of the fault will shorten troubleshooting and repair time. Include the warranty card and proof of purchase with the equipment within the warranty period. We will repair your equipment for a reasonable price after the warranty period expires.

To prevent damage to the equipment during transport, pack it securely and use the original packaging. We are not liable for any damage during transit and any claims with the shipping service depends on the level of packaging and protection against damage.

Note: The illustrations may differ from the product delivered and the extent and type of accessories supplied can also vary. This is a result of development, and such differences have no impact on the product's correct functionality.